

# Panel Firmware Check

## 1ME Panel Firmware Check Procedure

1. With the Broadcast Pix Application NOT running, push the “Panel Setup and Test” button (near the “Join the Show” button), then
2. On the Pix-Pad below, select “Show Date.” Your current firmware version will show on the Panel readout screen.

*Our current 1ME version is 5-28-08*



## 2ME Panel Firmware Check Procedure

1. With the Broadcast Pix Application NOT running, push the “Setup + Test” button (below the joystick), then
2. On the Pix-Pad below, select “Show Date.” Your current firmware version will show on the Top Panel readout screen.

*Our current 2ME version is 5.2.4*

